

Accessory Cross Reference

Item Number	511-33	511-60	518-114	518-115	518-116 (NLA)	518-73-3 (NLA)	518-77-4	518-87-5	518-88-5	Comments
511-9773	X	X	X	X	X	X	X	X	X	
511-9773NL	X	X	X	X	X	X	X	X	X	
511-CF72	X	X	X	X	X	X	X	X	X	Use With 511-TL10 or 518-TL75
511-9770	X	X	X	X	X	X	X	X	X	Use with 511-TL10, 518-TL75, 518-TL220, 518-TL222, or 518-TL224
518-80AK					X					
518-80CK-M		X			X		X	X	X	Use with 518-80TK
518-80PK-1		X			X		X	X	X	Use with 518-80TK
518-80PK-22		X			X		X	X	X	Use with 518-80TK
518-80PK-24		X			X		X	X	X	Use with 518-80TK
518-80PK-3A		X			X		X	X	X	Use with 518-80TK
518-80TK		X			X		X	X	X	Requires mV setting
518-AC220	X	X	X	X	X	X	X	X	X	Use with 518-TL220, 518-TL222, or 518-TL224
518-AC280	X	X	X	X	X	X	X	X	X	Use with 518-TL220, 518-TL222, or 518-TL224
518-AC283	X	X	X	X	X	X	X	X	X	Use with 518-TL220, 518-TL222, or 518-TL224
518-AC285	X	X	X	X	X	X	X	X	X	Use with 518-TL220, 518-TL222, or 518-TL224
518-AC72	X	X	X	X	X	X	X	X	X	Use With 511-TL10 or 518-TL75
518-i1010		X			X		X	X	X	Requires mV setting
518-l410		X			X		X	X	X	Requires mV setting
518-PV350								X	X	
518-RPM80									X	
518-TL220	X	X	X	X	X	X	X	X	X	
518-TL221	X	X	X	X	X	X	X	X	X	
518-TL222	X	X	X	X	X	X	X	X	X	
518-TL224	X	X	X	X	X	X	X	X	X	
518-TL26A	X	X	X	X	X	X	X	X	X	
518-TL28A	X	X	X	X	X	X	X	X	X	
518-TL75	X	X	X	X	X	X	X	X	X	
518-TP1	X	X	X	X	X	X	X	X	X	Use with 518-TL220, 518-TL222, or 518-TL224
518-TP220	X	X	X	X	X	X	X	X	X	Use with 518-TL220, 518-TL222, or 518-TL224