

CDI Electronics®

Chrysler

Capacitive Discharge Module with Alternator (ADI – Alternator Driven Ignition)

GENERAL:

1. Disconnect the stop wires from the CD. Measure DC voltage from the stop wires (from the harness) to engine ground. Turn the ignition switch on and off several times. DC voltage should never exceed 2V. If it does, the stop circuit has a fault. Check the key switch, harness and shift switch.
2. Check the flywheel for a broken or loose magnet.
3. Check for broken wires and terminals, especially inside the plastic plug-in connectors. We recommend that you remove the pins from the connectors using the CDI 511-9706 pin removal tool and visually inspect them.
4. Visually inspect the stator for burned or discolored areas. If found, replace the stator. If the areas are on the battery charge windings, it indicates a possible problem with the rectifier.

NO SPARK ON ANY CYLINDER:

1. Disconnect all stop wires AT THE POWER PACK.
2. Disconnect the rectifier. If the engine sparks, replace the rectifier.
3. Check for broken or bare wires on the unit, stator and trigger.
4. Check the stator and trigger resistance and DVA voltage as follows:

| WIRE | READ TO | OEM RESISTANCE | CDI RESISTANCE | DVA |
|--------------------------|--------------------------|----------------|----------------|---------------------|
| Brown/Blue (or Blue) | Brown/Yellow (or Yellow) | 680-900 | 250-350 | 180-400 V Connected |
| Brown/Blue (or Blue) | Engine GND | Open | Open | < 2 V Disconnected |
| Brown/Yellow (or Yellow) | Engine GND | Open | Open | < 2 V Disconnected |
| White/Orange (or Orange) | White/Yellow (or Green) | 45-55 | 45-55 | 0.5 V + Connected |
| White/Red (or Red) | White/Green | 45-55 | 45-55 | 0.5 V + Connected |

NO SPARK OR INTERMITTENT SPARK ON ONE CYLINDER:

1. Check the stator and trigger resistance and DVA voltage (see NO SPARK ON ANY CYLINDER above).
2. If readings are good, disconnect stop wire from one pack. If the dead cylinder starts firing, the problem is likely the blocking diode in the opposite pack.

POWER PACK OR TRIGGER REPEATEDLY BLOWS ON SAME CYLINDER:

1. Check the trigger wires for shorts to engine ground as a shorted trigger wire can destroy a SCR inside the power pack.
2. In contrast, a shorted SCR inside the power pack can destroy a trigger coil. Check the trigger resistance and DVA output (see NO SPARK ON ANY CYLINDER above).
3. Replace the ignition coil on the cylinder dropping spark.

NO SPARK ON TWO CYLINDERS:

1. If two cylinders from the same CD unit will not spark, the problem is usually in the stator. Test per above.
2. If the engine has a CDI stator installed:
 - A. If #1 and #3 are the ones not firing, disconnect the Yellow stator wire from the # 1 pack and see if the #3 cylinder starts firing. If so, replace the #1 pack. If not, then reconnect the Yellow stator wire to the # 1 pack and disconnect the Yellow stator wire from the # 2 pack and see if the #1 cylinder starts firing. If so, replace the # 2 pack.
 - B. If #2 and #4 are the ones not firing, disconnect the Blue stator wire from the # 1 pack and see if the #4 cylinder starts firing. If so, replace the #1 pack. If not, then reconnect the Blue stator wire to the # 1 pack and disconnect the Blue stator wire from the # 2 pack and see if the #2 cylinder starts firing. If so, replace the # 2 pack.

ENGINE WILL NOT SHUT OFF:

Disconnect all stop wires at the power pack. Connect a jumper wire to the stop wire from the pack and short it to engine ground. If this stops the pack from sparking, the stop circuit has a fault. Check the key switch, harness and shift switch. If this does not stop the pack from sparking, replace the power pack. Repeat test as necessary for additional packs.

COILS ONLY SPARK WITH THE SPARK PLUGS OUT:

Check for dragging starter or low battery causing slow cranking speed. DVA test stator and trigger.

MISS AT ANY RPM:

1. Disconnect the rectifier from the stator and retest. If the miss clears, replace the rectifier.
2. In the water or on a Dynameters, check the DVA output from the power pack outputs while connected to the ignition coils. You should have a reading of at least 150V DVA or more, increasing with engine RPM until it reaches 300-400V DVA maximum. A sharp drop in DVA right before the miss becomes apparent on all cylinders will normally be caused by a bad stator. A sharp drop in DVA on less than all cylinders will normally be the switch box or trigger.
3. Connect an inductive tachometer to each cylinder in turn and try to isolate the problem. A high variance in RPM on one cylinder usually indicates a problem in the switch box or ignition coil. Occasionally a trigger will cause this same problem. Check the trigger DVA voltage (see NO SPARK ON ANY CYLINDER above).
4. Perform a high-speed shutdown and read the spark plugs. Check for water. A crack in the block can cause a miss at high speed when the water pressure gets high, but a normal shutdown will mask the problem.
5. Check the triggering and charge coil flywheel magnets for cracked, broken and loose magnets.
6. Rotate the stator one bolt hole in either direction and retest.