

## Installation and Troubleshooting Guide



## CDI P/N: 511-9764 Neon 1 Cyl Spark Tester

NOTE: The 511-9764 single cylinder tester is for use in checking spark to the spark plug. **Do not** operate the engine over 3 minutes at a time due to heat build up inside the tester. Overheating the tester will destroy the unit.

## For Cranking Test:

- 1. Disconnect the spark plug wire from the spark plug and connect it to the screw terminal in the tester.
- 2. Connect the large spring clip to engine ground.
- 3. Crank the engine over and watch for consistent firing.

WARNING! Prolonged usage of the tester can overheat the starter. Allow time for the starter to cool down between tests.

## For Running Test:

- 1. Disconnect the spark plug wire from the spark plug and connect it to the screw terminal in the tester.
- 2. Connect the spark tester to the spark plug.
- 3. Start the engine and watch for consistent firing.