

CDI Ignition and Troubleshooting Guide

CDI Electronics

Installation is to be completed by an Authorized Dealer or Professional Service Technician. For questions regarding installation or warranty, call CDI Tech Support at 866-423-4832. **Do not return to the Dealer or Distributor where the part was purchased. Contact CDI Electronics Directly for Return Material Authorization.**



CDI P/N: 119-3G2-01 Ignition Pack 2 Cylinder

NOTE: This unit replaces P/N's: Replaces: 3G2-06060-1M, 3G2-06060-1 and CU2501.
Fits 1993-1997 M9.9C, M15C, M18D, NS9.9C, NS15C, NS18D.

NOTICE! This product is designed to be installed by a professional marine mechanic. CDI Electronics cannot be held liable for injury or damage resulting from improper installation, abuse, neglect or misuse of this product.

WARNING!!! NEVER DISCONNECT THE SPARK PLUG WIRES WHILE THE ENGINE IS RUNNING AS THIS WILL DAMAGE THE IGNITION COIL. DO NOT ATTEMPT TO START THE ENGINE WITH THE SPARK PLUG WIRES NOT CONNECTED EITHER TO THE SPARK PLUGS OR A SPARK TESTER.

INSTALLATION

1. Disconnect the battery.
2. Disconnect all wires from the old power pack and remove it from the engine.
3. Thoroughly clean all ground connections and power pack area.
4. Install the new power pack using the original bolts.
5. Connect the Red, Black and Blue wires from the power pack to the charge (exciter) coil (Red), plate ground (Black) and trigger (pulsar) coil (Blue).
6. Connect the Black wire to engine ground.
7. Connect the Black/Yellow wire to the ignition coil.
8. Connect the Brown and Black stop (kill) wires to the engine harness or stop circuit.
9. Reconnect the battery.

TROUBLESHOOTING

Recommended tools:

CDI 60 OR 33 multimeter with DVA adapter (CDI 511-9773NL)

Piercing probes (CDI 511-9770)

NO FIRE ON EITHER CYLINDER:

1. Disconnect the Black and Brown stop wires and retest. If you now have spark, the stop circuit has a fault.
2. Test the stator (exciter) and trigger (pulsar) stator coils as follows:

<u>Red Lead</u>	<u>Black Lead</u>	<u>Resistance DVA</u>
-----------------	-------------------	-----------------------

Red	Black 168-252	135 V min
Blue	Black 30-46	4 V min
Black/Yellow	Eng Ground -	150 V Min

If the above readings are OK and there is no spark, the ignition coil is likely defective

No Fire on One Cylinder:

If only one spark plug has fire, the ignition coil is defective.

High Speed Miss:

1. If the boat is equipped with a Hummingbird I.D. depth finder, disconnect the power to it and retest. If the miss is gone, switch to a different depth finder. See Tohatsu Service Bulletin # 1200, dated 9/14/1990.
2. Check fuel lines/tank for restrictions, leaks or loose connections.
3. Check fuel pump diaphragms for holes, allowing extra fuel at high RPM's.
4. Verify correct spark plugs are installed and are not fouled.
5. Disconnect the stop switch and retest. If the engine performs properly, the stop circuit has a fault.

CDI Electronics, LLC • 353 James Record Road SW • Huntsville, AL 35824 USA

Web Support: www.cdielelectronics.com • Tech Support: 1-866-423-4832 • Order Parts: 1-800-467-3371

All rights reserved. Reproduction or use of content, in any manner, without express written permission by CDI Electronics, LLC., is prohibited.